

Keypad Maps

The computer keypad provides access to a wide range of Kurzweil 1000 features and functions.

There are three main keypad layers: Reading, File Management and Settings, and each layer has a "Shifted" sub-layer. This document provides visual "maps" of the keys and their functions for the layers and Shifted layers. For complete information about the keypads, refer to online Help, the Quick Reference or the document entitled, *Using the Keypad to Access Kurzweil 1000*.

To switch between layers, hold down the **Shift** key (the horizontal key in the lower-left corner of the keypad) and tap the **Accept** key (the small key in the upper-right corner of the keypad) until you hear the name of the layer you want.

To access a keypad sublayer, hold down the **Shift** key and a key on the keypad. For instance, after you press the Shift Accept combination to get to the File Management main keypad press the Shift and number 2 keys to get to its sublayer; this key combination saves your file in export format.

Reading Keypad

Cancel	Erase Text	Dictionary	Accept
Volume Up	Speed Up	Reading Mode	Start and Stop Scanning
Volume Down	Speed Down	Multiple Column	
Rewind	Fast Forward	Go To Page	Help and Status
Start and Stop Reading		Spell	

Reading Keypad, Shifted

The Shift key is the key in the lower left corner of the keypad, or the Control key on the keyboard.

No Function	Paste Page	Thesaurus	Change Keypads
Recognize Currency	No Function	White on Black	Rescan or Insert Scan
No Function	Create Bookmark	Two Pages	
Rewind by Unit	Forward by Unit	Go To Bookmark	Help and Status
(Shift key)		Spell with Alpha	

Screen Reader Keypad

To use this keypad, select the ScreenReader option for Keypad Commands in the Configuration Settings.

Cancel	Erase Text	Dictionary	Accept
Home	Up Key	Page Up	Start and Stop Scanning
Previous Character	Current Character	Next Character	
End	Down Key	Page Down	Help and Status
Start and Stop Reading		Delete	

Screen Reader Keypad, Shifted

No Function	Paste Page	Thesaurus	Change Keypads
Speak from Start of Line	Speak Line	Speak End of Line	Rescan or Insert Scan
Previous Word	Current Word	Next Word	
End	Down Key	Page Down	Help and Status
(Shift key)		Delete	

File Management Keypad

Cancel	Favorite Folders	Favorite Files	Accept
Change Folder	Make New Folder	Delete Folder	Start and Stop Scanning
Open File	Close File	Delete File	
Save File	Save As	Export File Format	Help and Status
Start and Stop Reading		No Function	

File Management Keypad, Shifted

No Function	Delete Favorite Folder	Delete Favorite File	Change Keypads
Folder under Current	No Function	No Function	Rescan or Insert Scan
No Function	No Function	No Function	
No Function	Save in Export Format	No Function	Help and Status
(Shift key)		No Function	

Settings Keypad

Cancel	Page Orientation	Number Layout	Accept
Reading Voice	System Voice	Scan/Recog. Progress	Start and Stop Scanning
Dynamic Thresh-olding	Scanning Mode	Partial Columns	
Punct. Level	Language	AutoLoad	Help and Status
Start and Stop Reading		Save/Restore Settings	

Settings Keypad, Shifted

No Function	No Function	No Function	Change Keypads
No Function	No Function	No Function	Rescan or Insert Scan
Brightness	No Function	No Function	
Number Pronun.	No Function	No Function	Help and Status
(Shift key)		No Function	

